

myRobot[®] C E N T E R

The expert for robots in your home

With one click to the online shop



myRobotcenter.eu



myRobotcenter.co.uk



myRobotcenter





LANDXCAPE™



20V robot lawn mower charger	EN	P04
20V Ladegerät für roboter-rasenmäher	D	
Chargeur 20V de tondeuse robot	F	
Caricatore del robot tosaerba da 20V	I	
Cargador de 20V para robot cortacésped	ES	
20V Laadapparaat voor robotgazonmaaier	NL	
Ładowarka 20v do zrobotyzowanej kosiarki	PL	
20V-0s fűnyíró-töltő	HU	
Robot de încărcare cu 20v pentru motocosoare	RO	
20V Nabíječka robotizované sekačky na trávu	CZ	
20V Nabíjačka pre robotizovanú kosačku na trávu	SK	
Carregador de cortador de relva robô 20v	PT	
20V Robot çim biçme makinesi şarj cihazı	TR	
20V Polnilnik za robotsko kosilnico	SL	

LA8003

  Original instructions	EN
Originalbetriebsanleitung	D
Notice originale	F
Istruzioni originali	I
Manual original	ES
Oorspronkelijke gebruiksaanwijzing	NL
Instrukcja oryginalna	PL
Eredeti használati utasítás	HU
Instrucțiuni originale	RO
Původní návod k používání	CZ
Pôvodný návod na použitie	SK
Manual original	PT
Orijinal işletme talimatı	TR
Izvirna navodila	SL

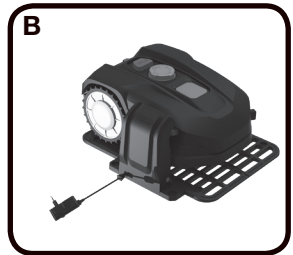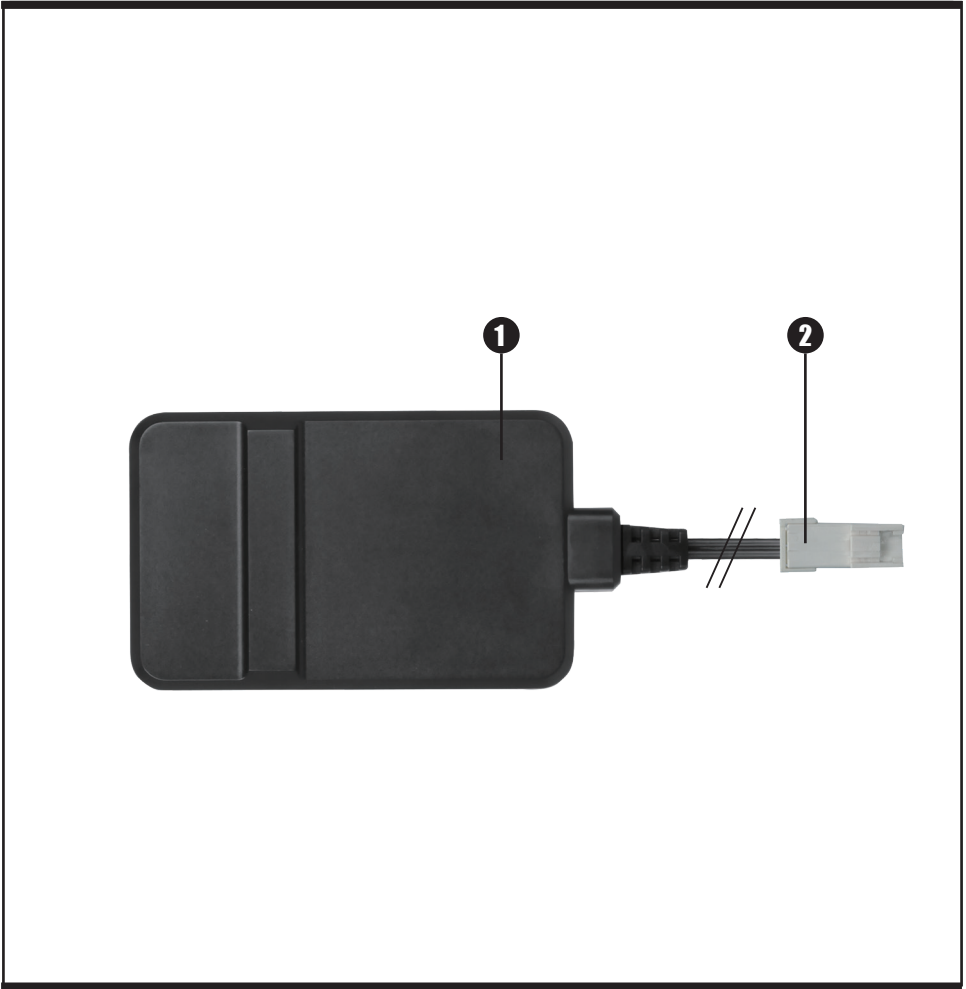

PRODUCT SAFETY

GENERAL SAFETY WARNINGS

 **WARNING: Read all safety warnings and all instructions.**

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

ADDITIONAL SAFETY INSTRUCTIONS FOR YOUR BATTERY CHARGER

1. Before charging, read the instructions.
2. Do not charge a leaking battery.
3. Do not use chargers for works other than those for which they are designed.
4. Before charging, ensure your charger is matching the local AC supply.
5. For indoor use, or do not expose to rain.
6. The charging device must be protected from moisture.
7. Do not use the charging device in the open.
8. Do not short out the contacts of battery or charger.
9. Respect the polarity “+/-“ when charging.
10. Do not open the unit and keep out of the reach of children.
11. Do not charge the batteries of other manufactures or ill-suited models.
12. Ensure that the connection between the battery charger and battery is correctly positioned and is not obstructed by foreign bodies.
13. Keep battery charger's slots are free of foreign objects and protect against dirt and humidity. Store in a dry and frost-free place.
14. When charging batteries, ensure that the battery charger is in a well-ventilated area and away from inflammable materials. Batteries can get hot during charging. Do not overcharge any batteries. Ensure that batteries and chargers are not left unsupervised during charging.
15. Do not recharge non-rechargeable batteries, as they can overheat and break.
16. Longer life and better performance can be obtained if the battery pack is charged when the air temperature is between 18°C and 24°C. Do not charge the battery pack in air

temperatures below 0°C, or above 40°C. This is important as it can prevent serious damage to the battery pack.

17. Charge only battery pack of the same model provided by LandxcapTM and of models recommended by LandxcapTM.

SYMBOLS



Read the operator's manual.



Warning



For indoor use only



Double insulation



Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.



Fuse



Positive terminal



Negative terminal



SMPS (Switch mode power supply unit)



SMPS incorporating a short-circuit-proof safety isolating transformer (inherently or non-inherently)


1. POWER ADAPTER

2. CONNECTOR

Not all the accessories illustrated or described are included in standard delivery.

We recommend that you purchase your accessories from the same store that sold you the tool. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

TECHNICAL DATA

Charger voltage	100-240 V~50/60 Hz
Power input	11 W
Output voltage	20 V $\overline{\text{---}}$ 0.5 A
Battery type	Lithium-ion
Charging time (approx.)	
2.0 Ah	4 hrs
Number of cells	5
Machine weight	0.3 kg
Protection class	 /II


For the technical data of the types, the number of cells and the rated capacity of the batteries that can be charged, please refer the nameplate of the battery pack supplied by LandxcapTM.

CHARGING PROCEDURE



NOTE: Before using the charger, read the instruction book carefully.

HOW TO USE YOUR CHARGER

- Plug charger directly into an electrical outlet. **DO NOT ABUSE THE CORD.** Never carry charger by cord. Do not disconnect the charger from the outlet by pulling it by the cord.
-  **CAUTION:** To reduce the risk of fire, electrical shock, or personal injury do not attempt to use this charger with any other product. Likewise, do not attempt to charge the mower with any other charger.
- Do not operate a damaged charger. Replace damaged cords or charger immediately at an authorized LandxcapTM service depot.
- Do not charge in wet locations. Do not charge mower when temperature is above 104°F (40°C) or below 41°F (5°C).
- Keep the mower and charger away from water, heat sources, (such as radiators, heaters, stoves...etc.) flames, or chemicals. Be careful not to damage the charger cord, by keeping cord away from sharp edges.

CONNECTING THE CHARGING STATION (SEE FIG. A)

1. When connecting, press the latch and lift up the protective cover on the charging base. Attach the connector on the power adapter to the charging base. And then place the protective cover back in its position.
2. Connect the charger's power cord to a wall socket. It is preferable to use an earth-fault breaker as recommended.

CHARGING A DISCHARGED BATTERY (SEE FIG. B)

When Landscaper™ is new or has been stored for a long period, the battery will not be charged and needs to be charged before starting.


1. Place Landscaper™ in the working area.
2. Press on/off key to start. Press HOME then OK to send Landscaper™ back to the charging base.
3. The charging base green light will be flashing, Landscaper™ will begin to charge.

MAINTENANCE

Remove the plug from the socket before carrying out any adjustment, servicing or maintenance.

Your charger requires no additional lubrication or maintenance. Never use water or chemical cleaners to clean your charger. Wipe clean with a dry cloth. Always store your charger in a dry place.

ENVIRONMENTAL PROTECTION

 Waste electrical products must not be disposed of with household waste. Please recycle where facilities exist. Check with your local authorities or retailer for recycling advice.

PLUG REPLACEMENT (ONLY FOR REWIRABLE PLUG OF UK & IRELAND)

If you need to replace the fitted plug then follow the instructions below.


IMPORTANT

The wires in the mains lead are colored in accordance with the following code:

 
Blue – Neutral

Brown – Live

As the colors of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured blue must be connected to the terminal which is marked with N. The wire which is coloured brown must be connected to the terminal which is marked with L.

 **WARNING:** Never connect live or neutral wires to the earth terminal of the plug. Only fit an approved BS1363/A plug and the correct rated fuse.

NOTE: If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

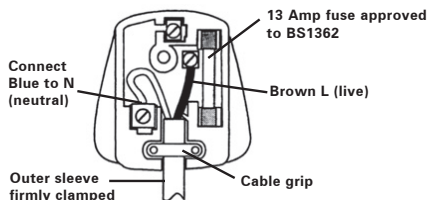

DECLARATION OF CONFORMITY

We,
Positec Germany GmbH
Grüner Weg 10, 50825 Cologne, Germany

Declare that the product,
Description **Landscaper™ Battery Charger**
Type **LA8003**

Complies with the following Directives,
2014/35/EU
2014/30/EU
2011/65/EU&EU2015/863

Standards conform to
EN 60335-1:2012+A1:2014
EN 60335-2-29:2004+A2:2010
EN 62233:2008
EN 55014-1:2006+A1:2009+A2:2011
EN 55014-2:2015
EN 61000-3-2:2014
EN 61000-3-3:2013
EN 61558-1:2005+A1:2009
EN 61558-2-16:2009+A1:2013



2019/10/30
Allen Ding
Deputy Chief Engineer Testing & Certification
Positec Technology (China) Co., Ltd
18, Dongwang Road, Suzhou Industrial
Park, Jiangsu 215123, P. R. China